

Room Thermostat User Information

Your thermostat will stay in factory default setting until you change it.
Default Settings:

- Day Setting: 70 Degrees
- Night Setting: 60 Degrees

To adjust your room temperature settings:

1. Turn your rotary switch to START
2. Press the Sun Symbol twice to change the daytime temperature
 - a. Press ▲ or ▼ to adjust
3. Press the Clock Symbol to exit.
4. Press the Moon Symbol twice to change the nighttime temperature
 - a. Press ▲ or ▼ to adjust
5. Press the Clock Symbol to exit.
6. Wait 5 seconds after adjusting the temperature. The thermostat shall memorize setting and return to the main screen.

Note: If you open your window, the heater will automatically shut off. When you close the window, the heater will become enabled again, but will return to the default settings.